

NanoPi R2C Plus

固件：

https://freeioe.oss-cn-beijing.aliyuncs.com/other/openwrt-rockchip-armv8-friendlyarm_nanopi-r2c-plus-squashfs-sysupgrade.img.gz

使用方式：

1. 下载固件文件
2. 烧写至tf卡
3. 插入设备启动
4. 写入eMMC(可选)

From:

<https://wiki.freeioe.org/> - FreeIOE 知识库

Permanent link:

https://wiki.freeioe.org/hardwares/nanopi_r2c_plus/start

Last update: **2023/11/17 18:21**

